
KORNICHE

gfdhomes
the home improvement group




Korniche Upstand
Installation Guide

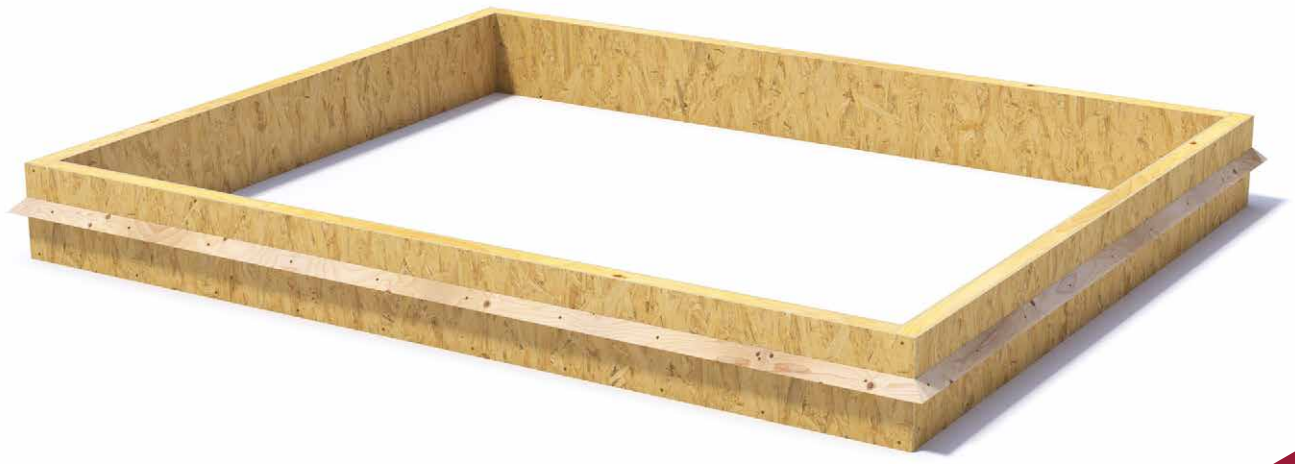

TOOLS / PARTS REQUIRED



Cordless Screwdriver

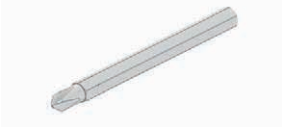

Crosshead Driver Bit



5mm x 100mm Screw (provided)



3.5mm x 45mm Screw (provided)



Spacer

PACKAGING CONTENTS



5mm x 100mm Screw
(provided)

USE ON FIXING POINTS MARKED IN RED



3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS MARKED IN BLACK

Spacer X 1


Base Sections x 4

Upstand Widths x 2

Upstand Lengths x 2


(Optional)
Short Chamfered
Batten x 2

(Optional)
Long Chamfered
Batten x 2

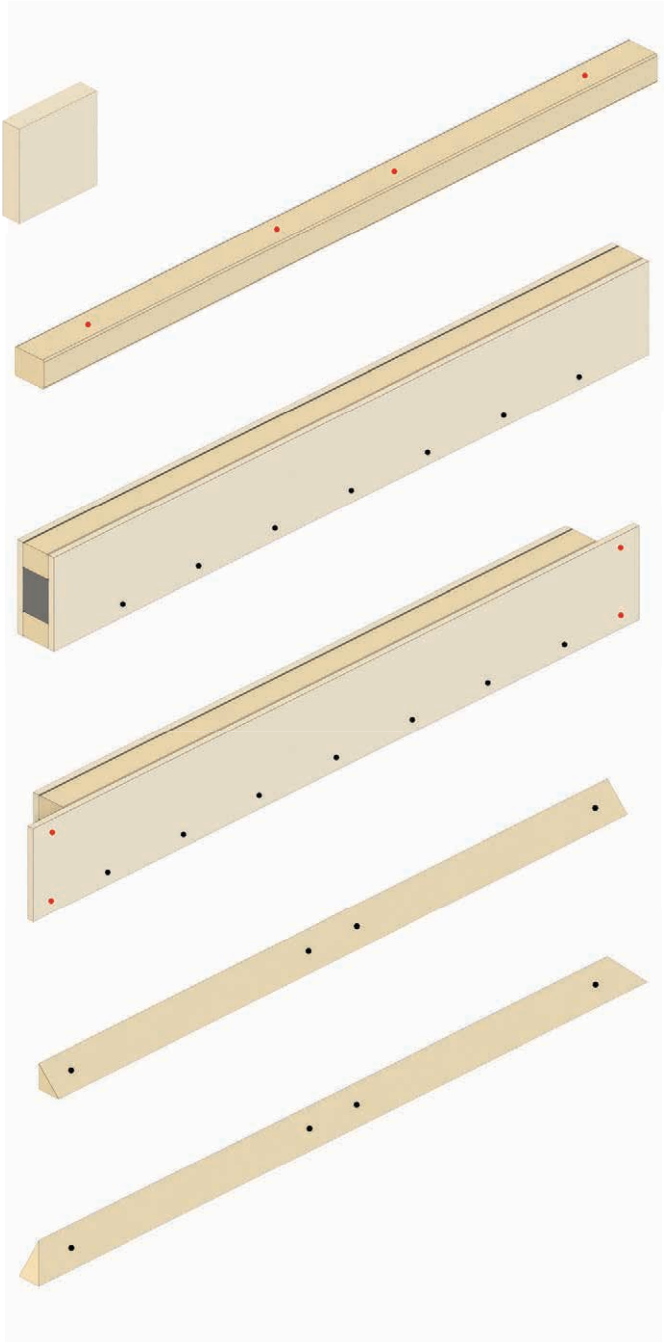



FIT BOTTOM BASE RAILS

1

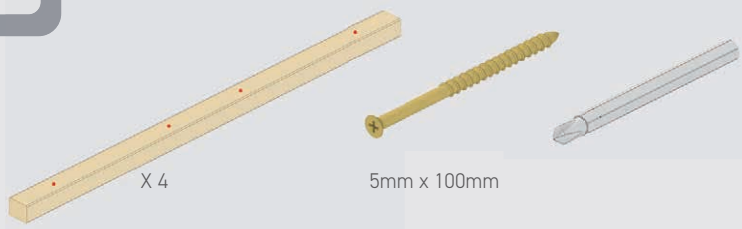


Position bottom rail battens around structural opening

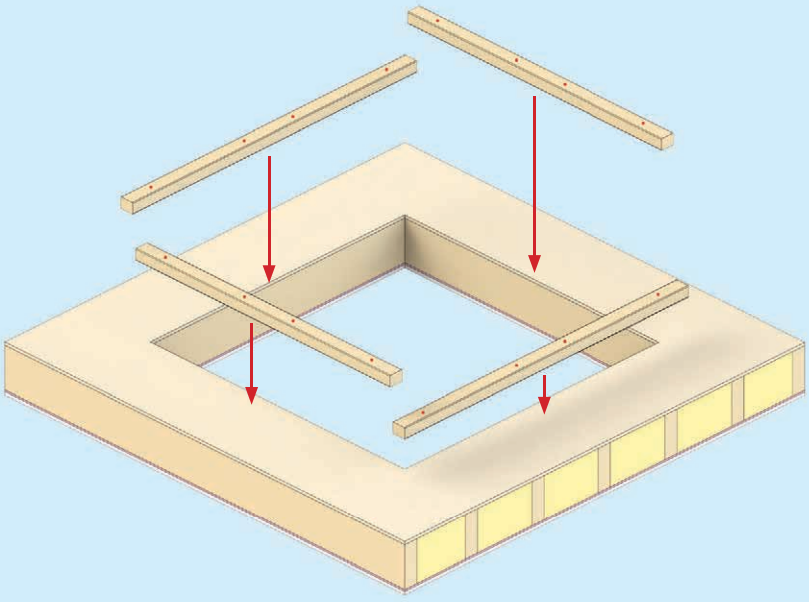


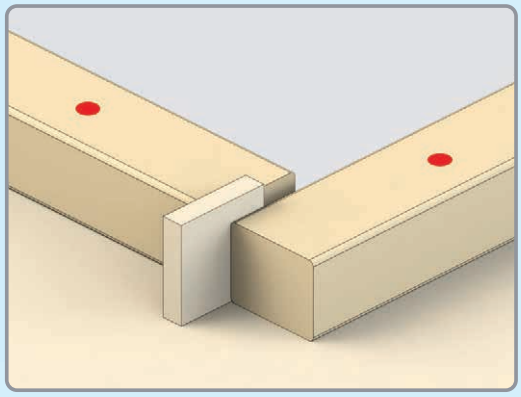

Use Spacer to set to correct gaps

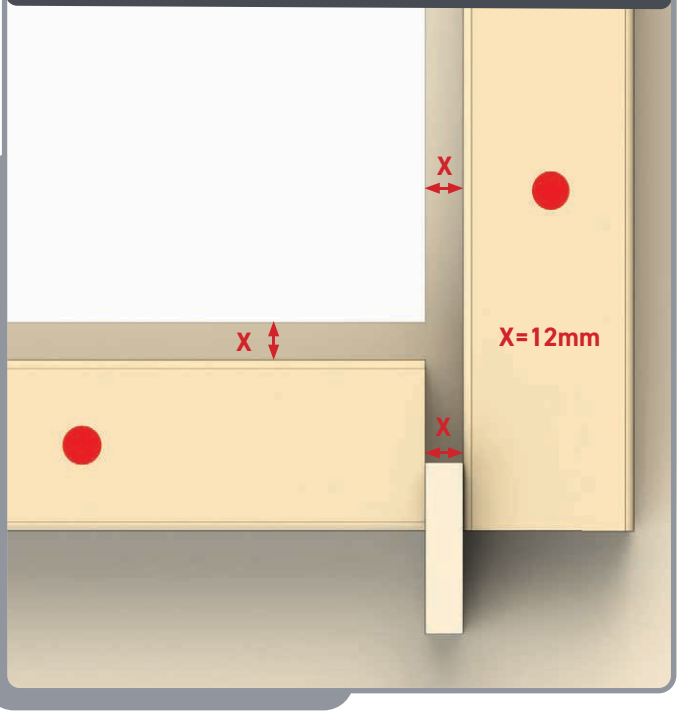

Check diagonals

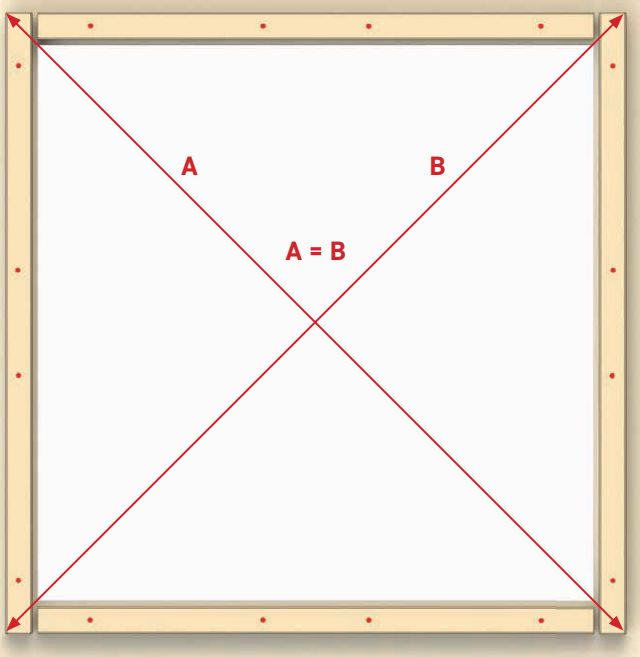






5mm x 100mm Screw
(provided)


USE ON FIXING POINTS MARKED IN RED

centre



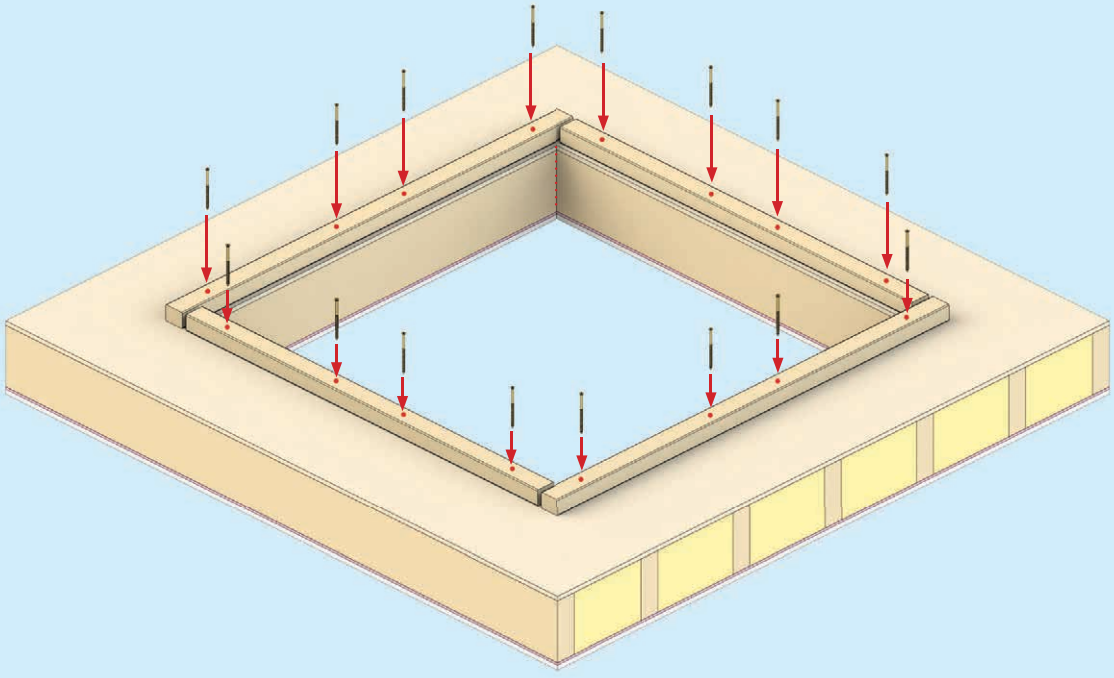


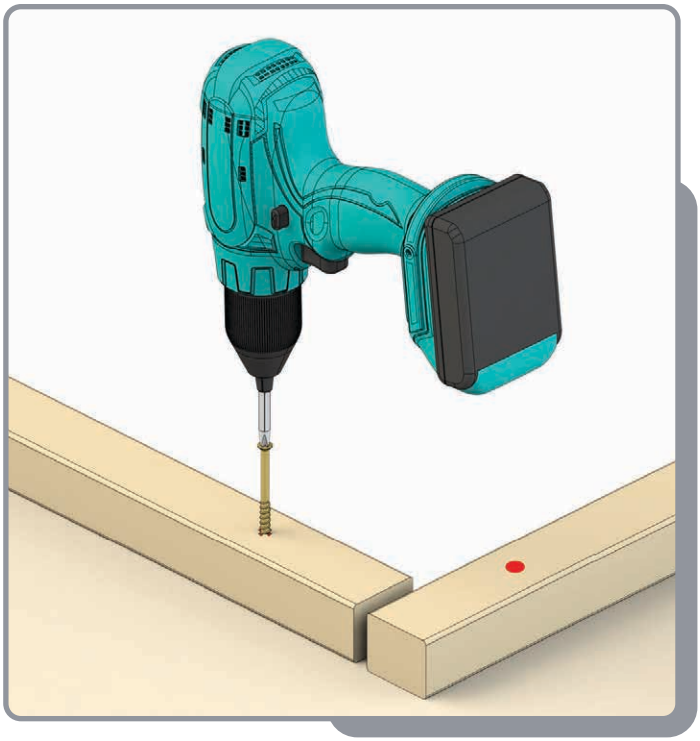


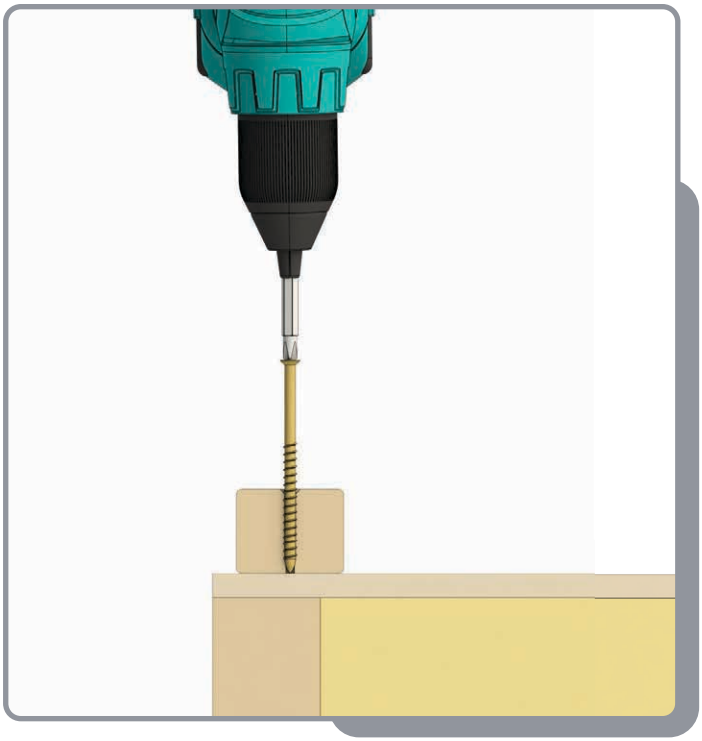


FIT UPSTAND WIDTHS

2

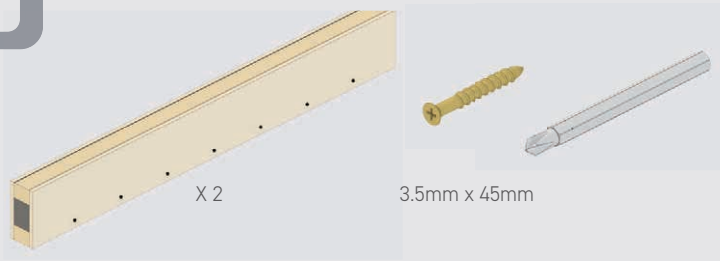

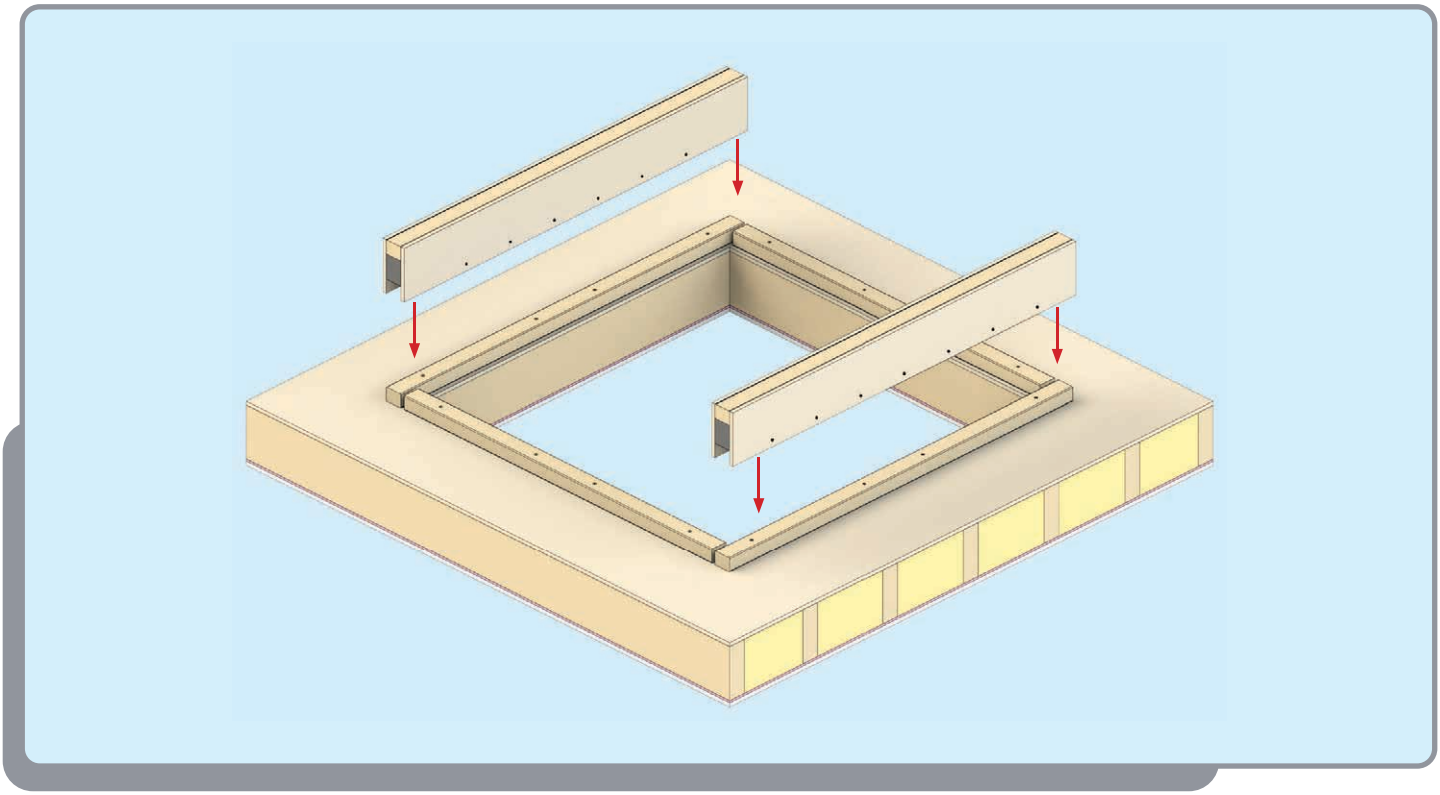

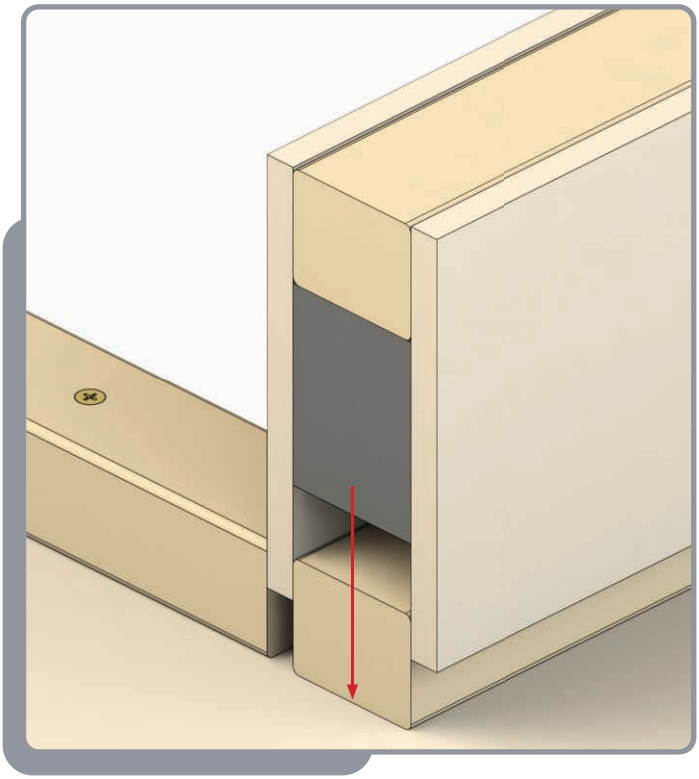









3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS MARKED IN BLACK

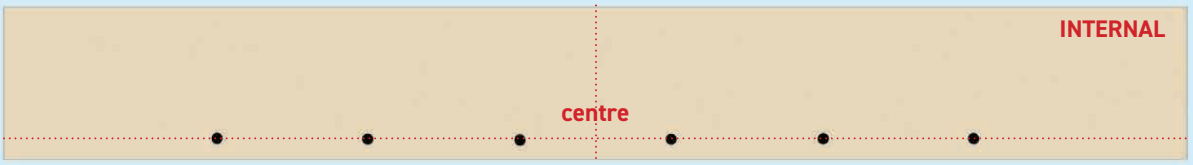

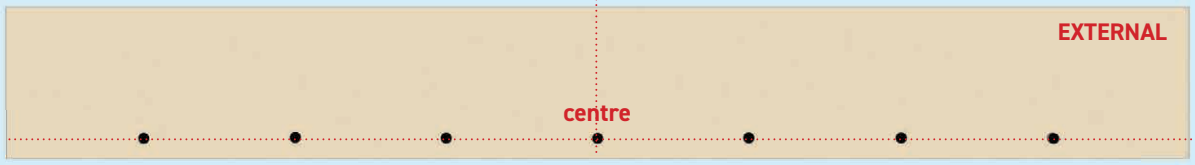


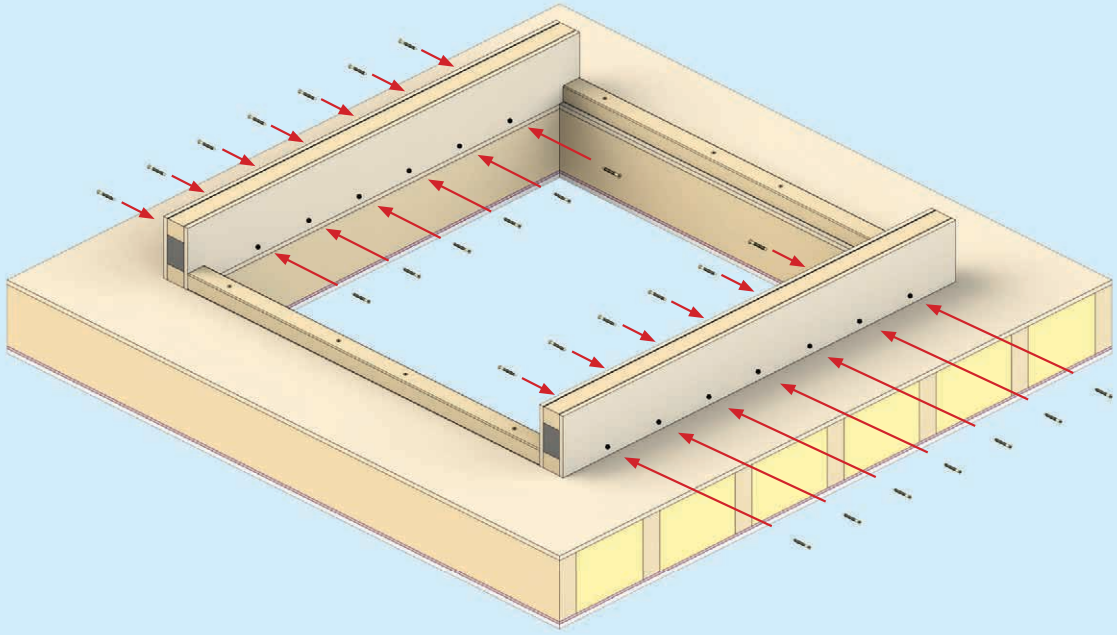


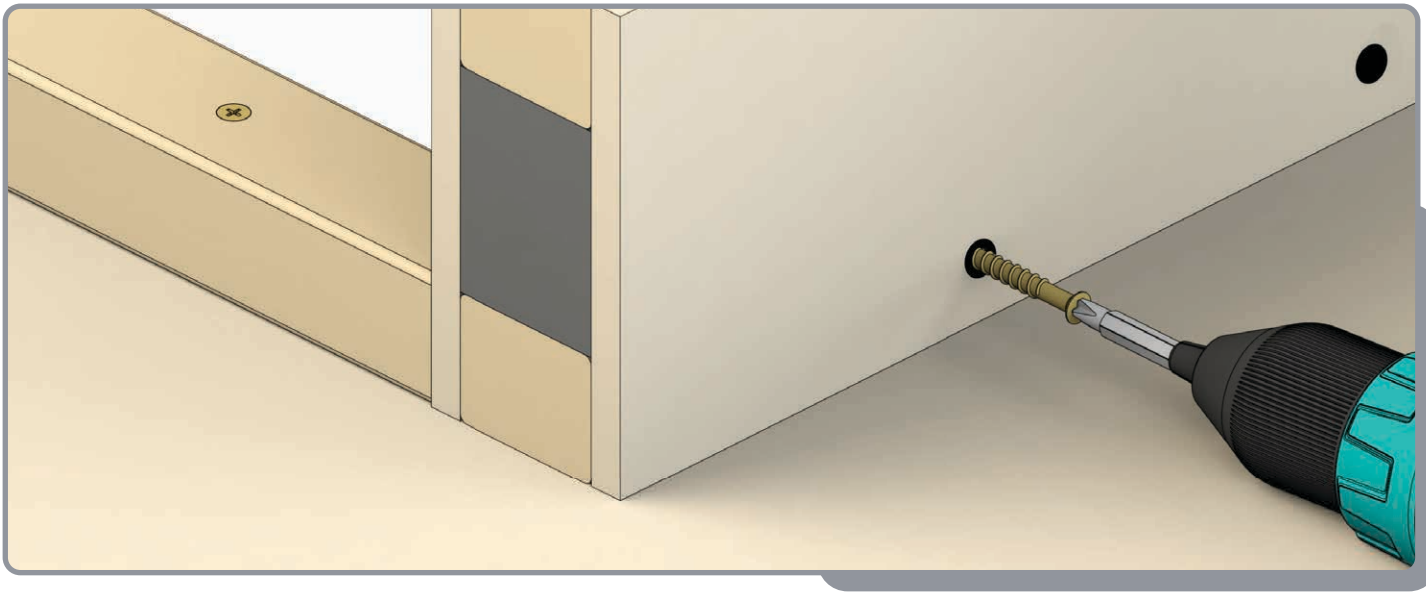


FIT UPSTAND LENGTHS

3

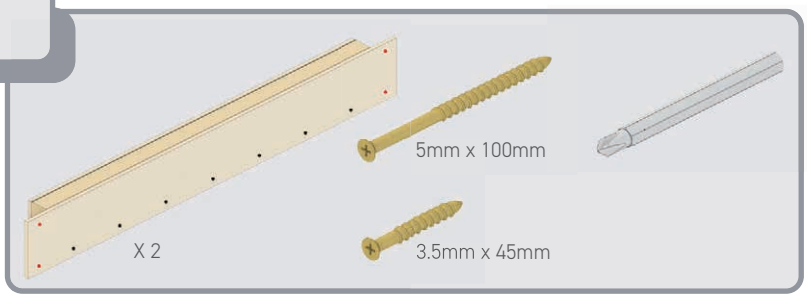

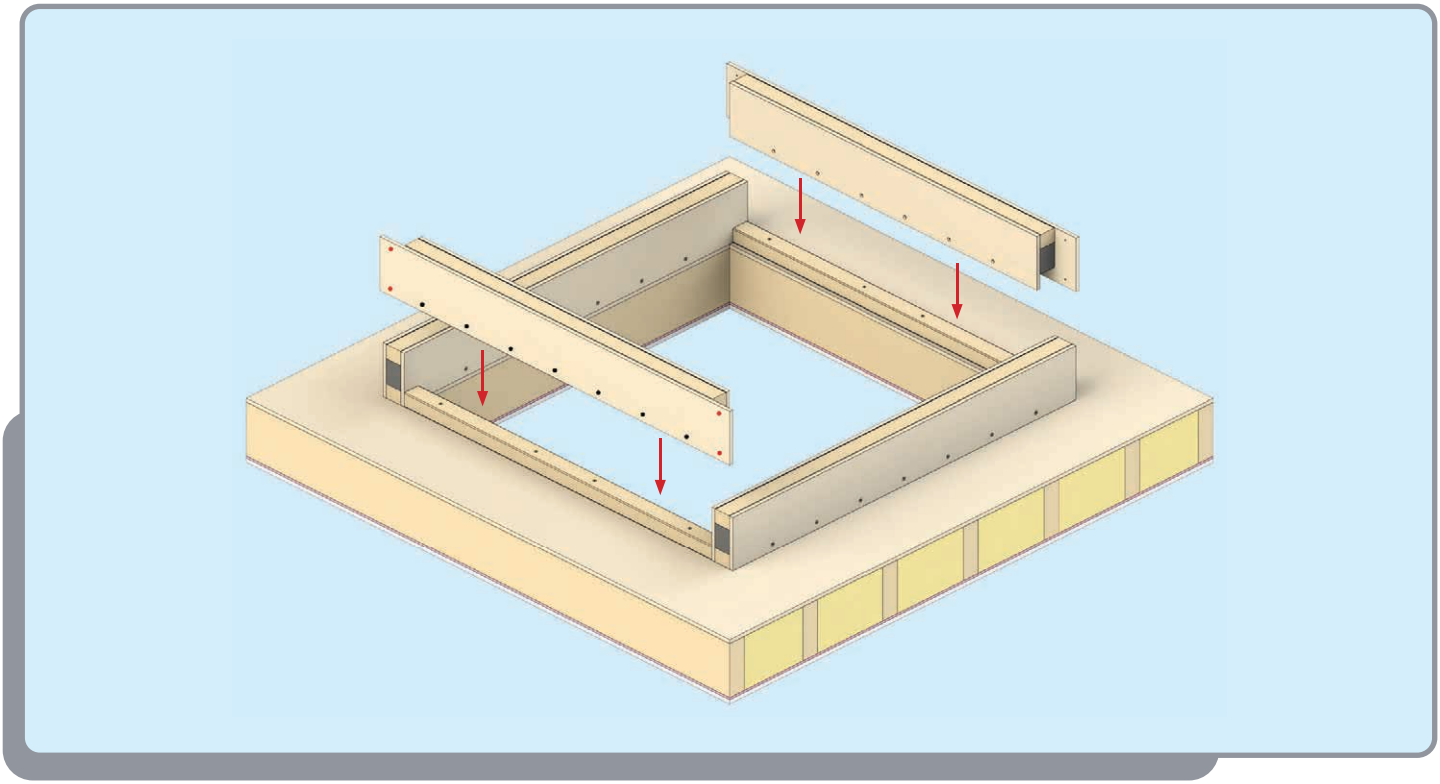

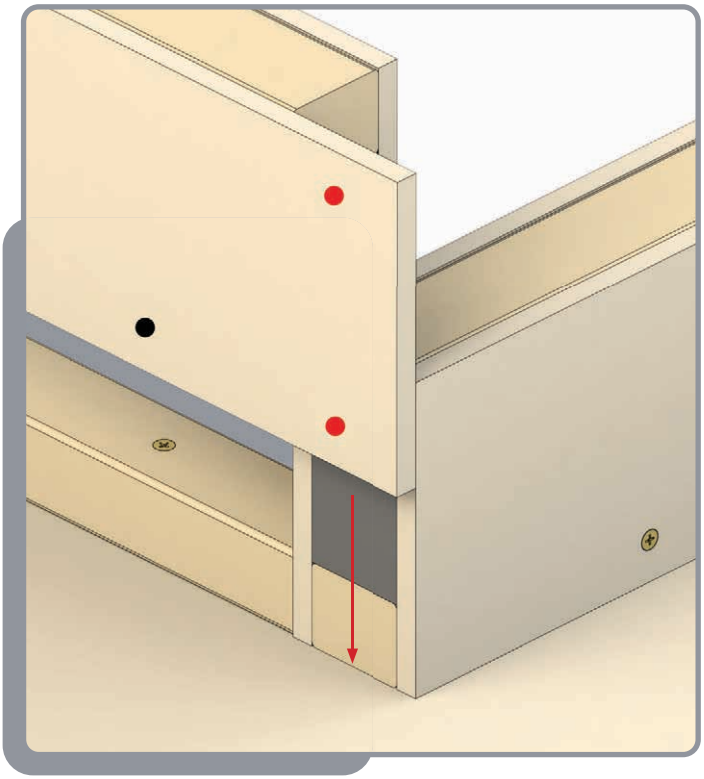







3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS MARKED IN BLACK

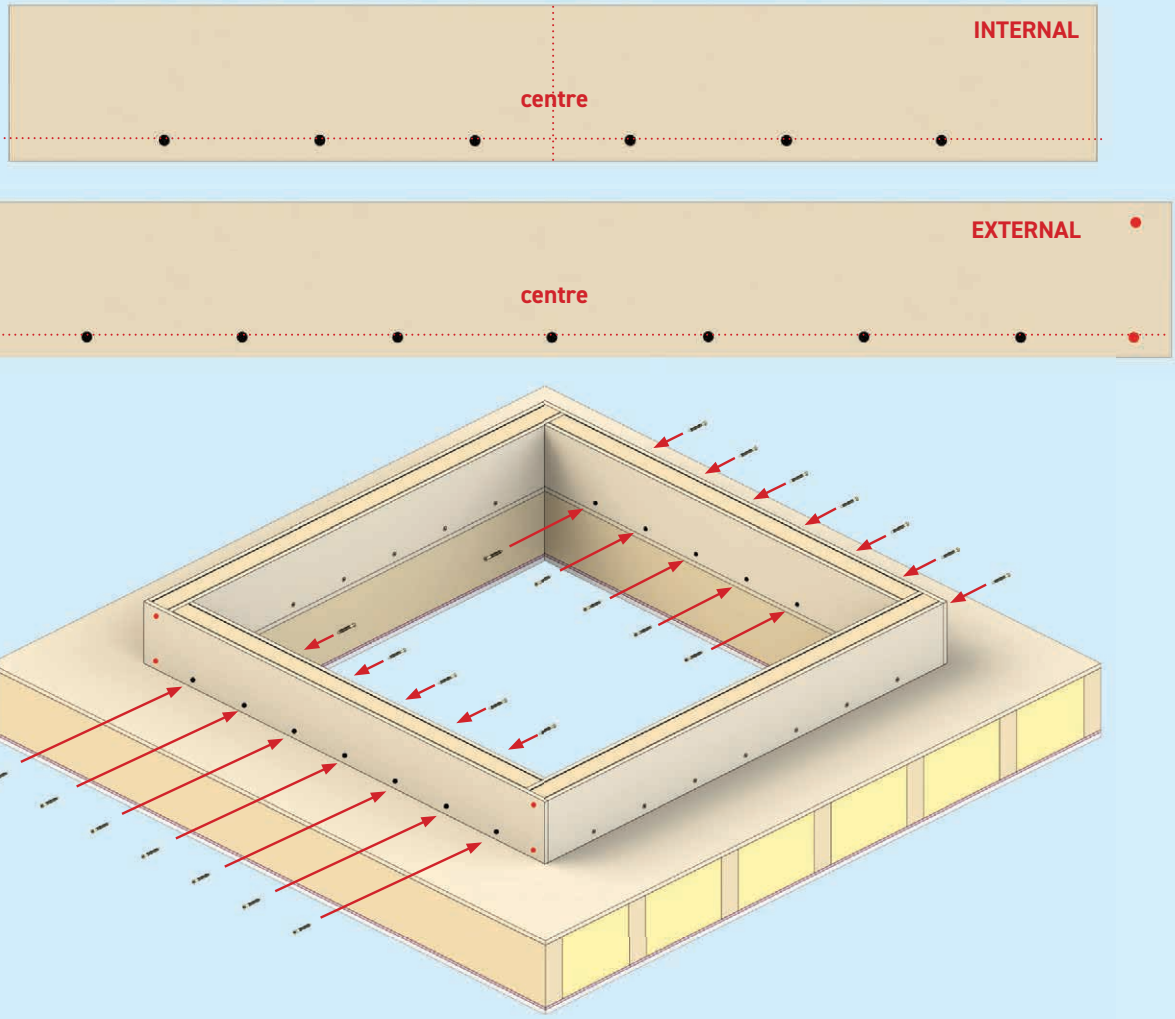


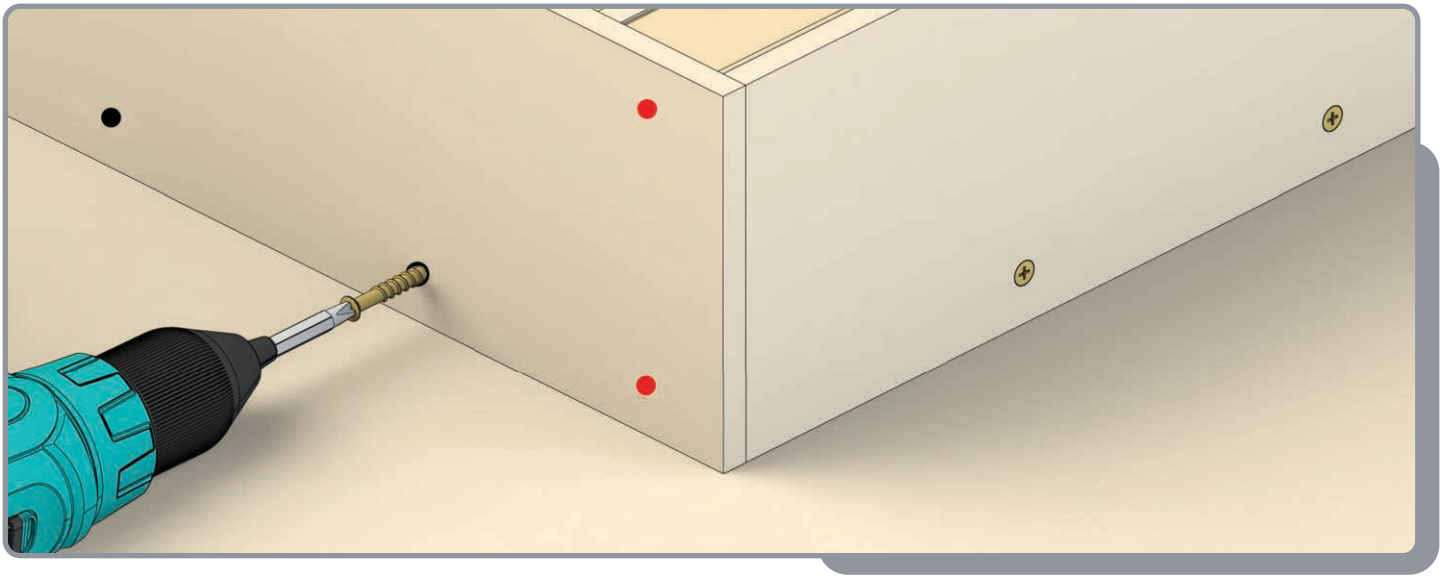





5mm x 100mm Screw
(provided)

USE ON FIXING POINTS MARKED IN RED

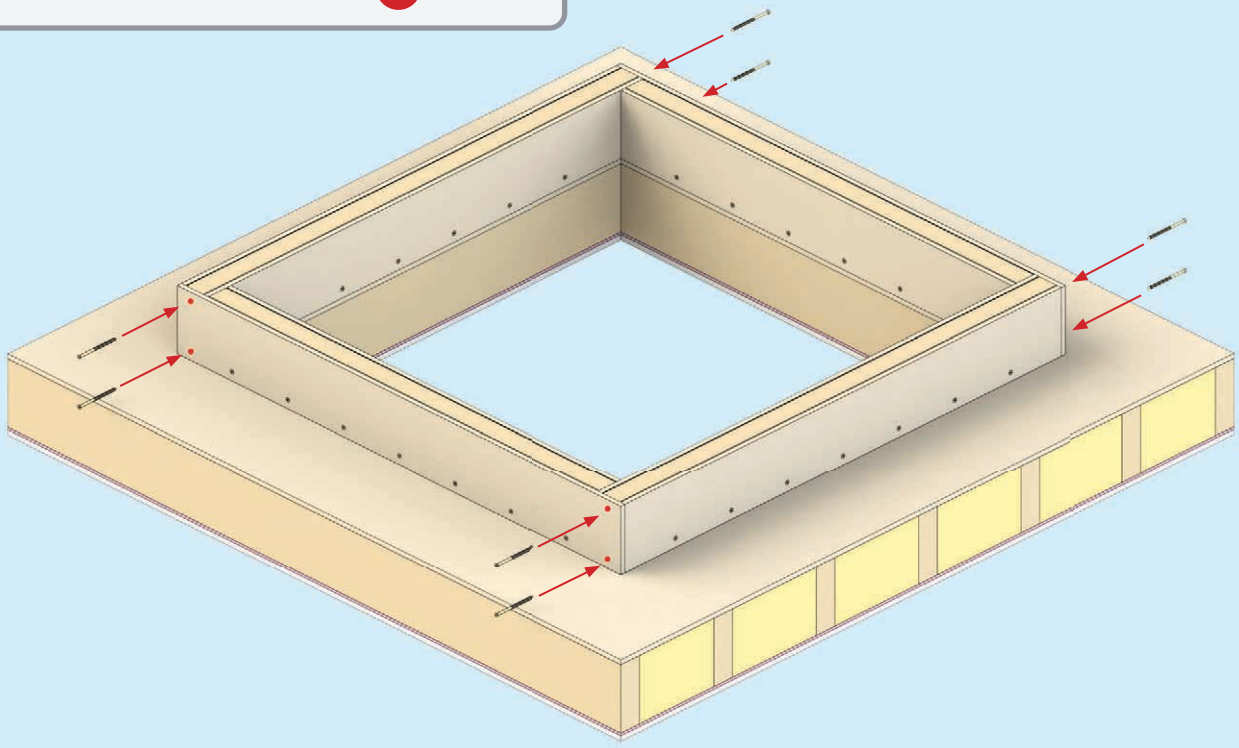


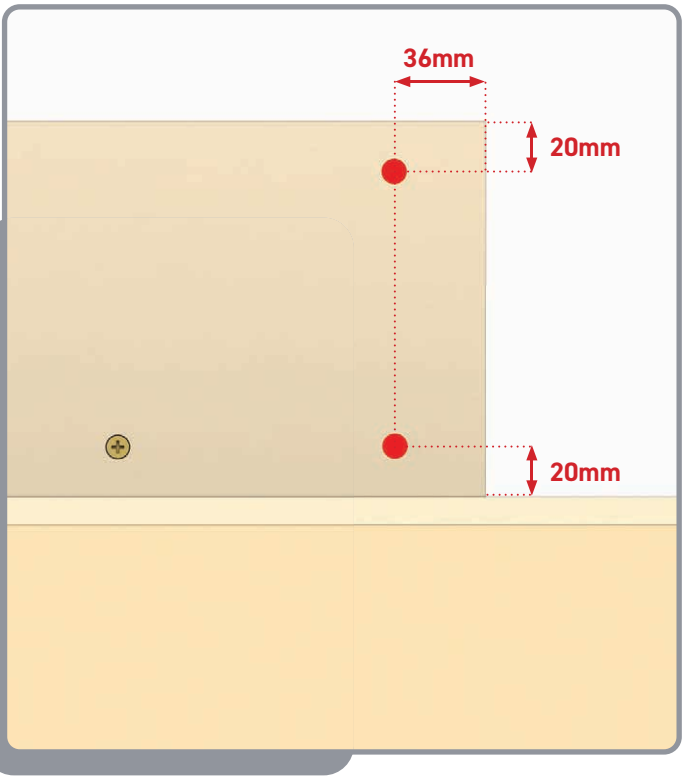

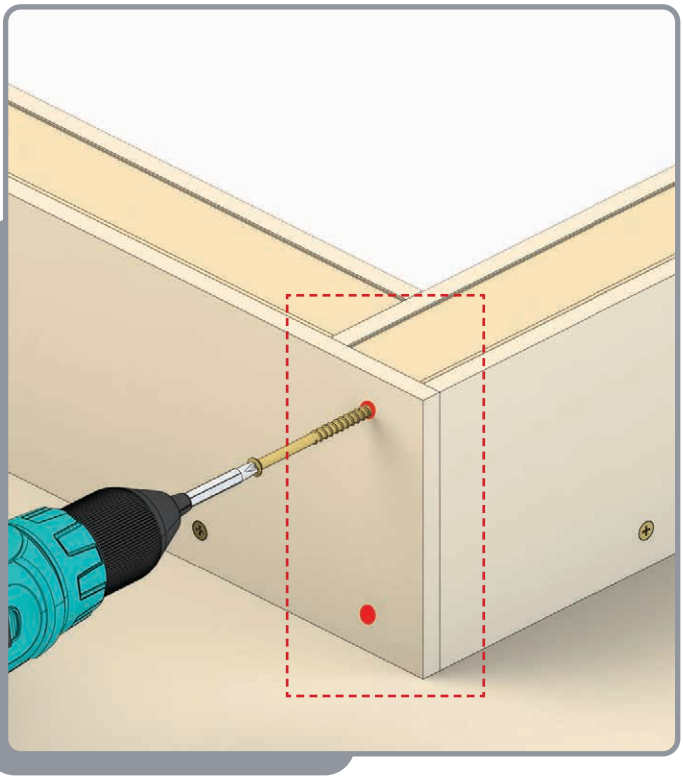

OPTIONAL - FIT CHAMFERED BATTENS

4

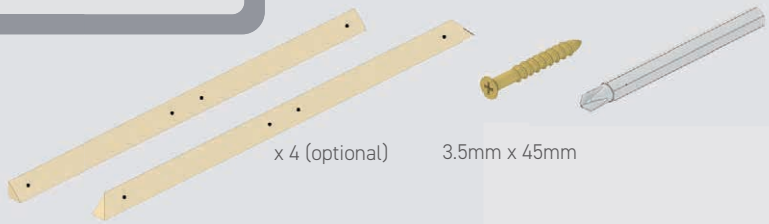



Position chamfered battens




3.5mm x 45mm Screw
(provided)


USE ON FIXING POINTS MARKED IN BLACK

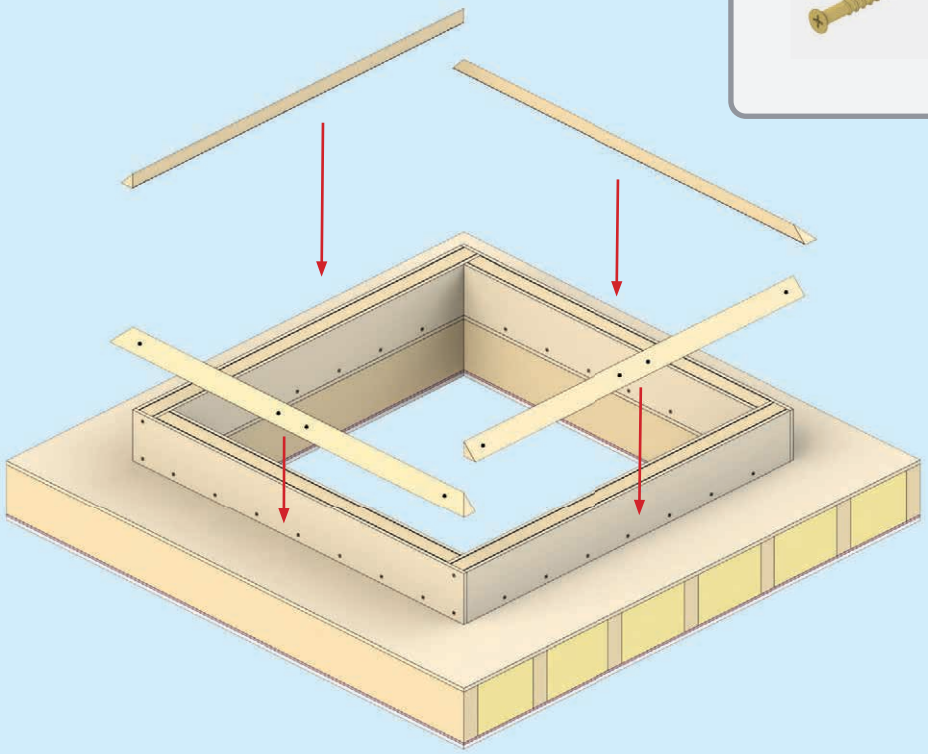


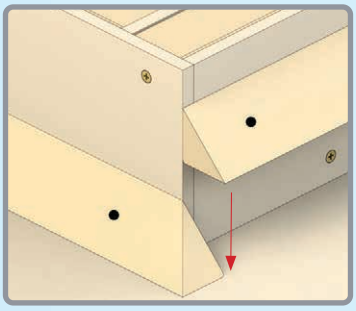

Ensure faces sit flush

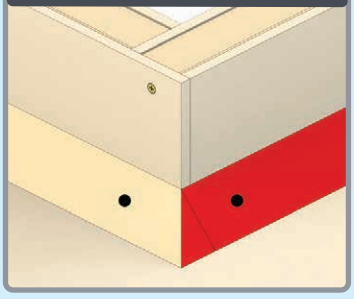

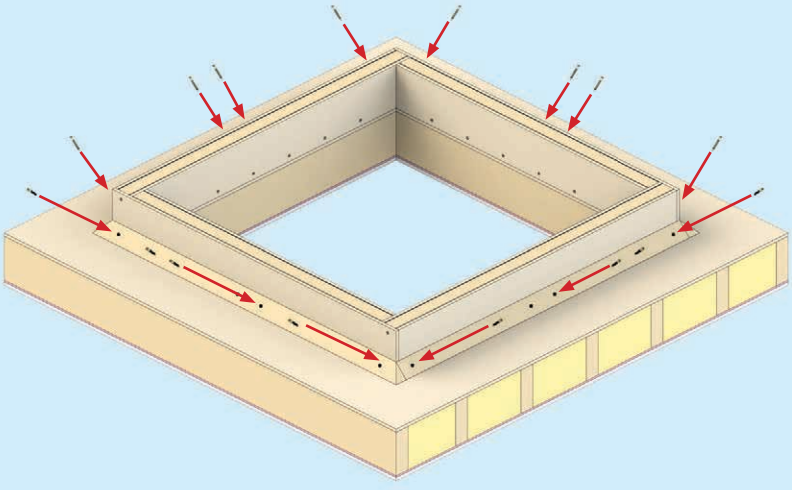

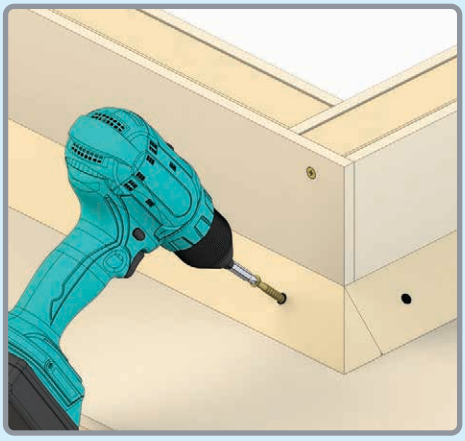

KORNICHE

gfdhomes
the home improvement group

01642 309 576
enquiries@gfdhomes.co.uk
gfdhomes.co.uk